



Telemark 2.2 PU

Build up Instructions

Congratulations!


We wish you lots of fun with your new Nordisk tent!



Spread out the tent. Thread the pole through the color coded pole sleeve. Ensure the door is closed.




Ensure an even surface without any sharp objects!

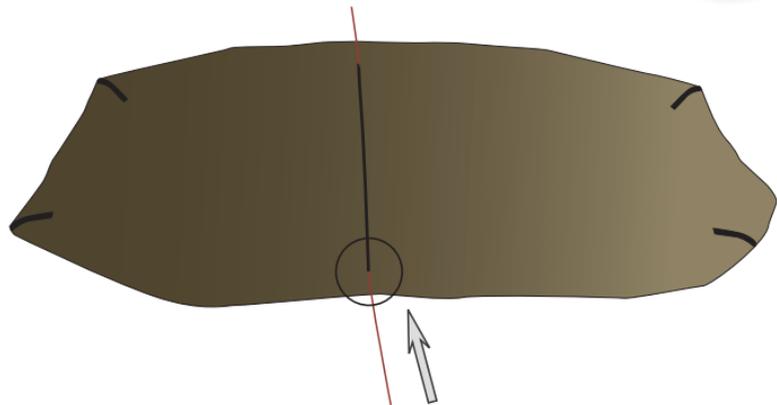

E

Fix the pole ends into the webbing eyelets. Secure the tent to the ground by attaching pegs onto each guy rope ring, starting in the end and facing the wind. Pull the guy rope rings in the opposite end towards you. Erect the tent and secure with pegs.

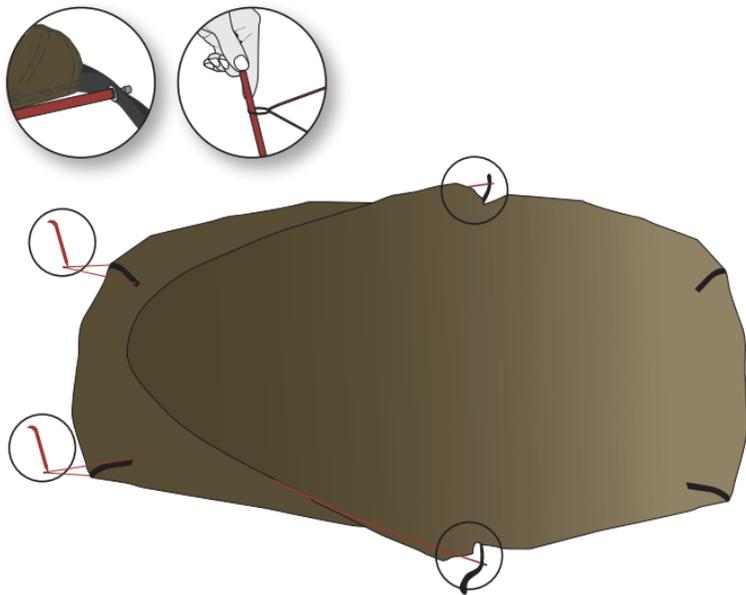**F**

Mount the remaining pegs to the ground. Adjust guy ropes for correct tension.



G

More guy ropes and pegs can be purchased at your local dealer.

**NORDISK®**



Use poles from bonus pack to set up the entrance of the flysheet. Push the end of the pole in the webbing pocket and connect the quick hook with the guy rope loop. Now set up the Vestibule

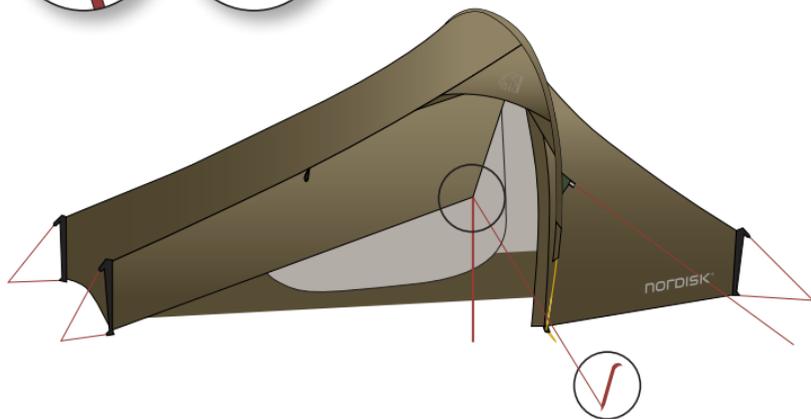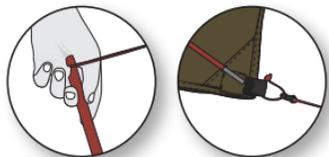

NORDISK®

Trek·Camp·Live

– take care of your Nordisk tent!

Before Trek

- build up the tent from home and **check if everything is ok.**
- **know the environment** you'll go to (sand, hard soil, snow), and check that pegs etc. matches this
- consider to bring along a **footprint**
- **check that the poles are ok**, and if not; buy a new set before you go
- **bring along a repair kit** incl. an outer tube for poles and tape for broken seams etc.
- make sure the **tent is clean**
- ensure that **zippers runs smoothly** (if not, get some silicone spray)
- if trekking in very wet conditions, **seal the seams** with a seam sealer, but check if it is SI or PU
- do not overfill your packsack as you might need the **extra space** during the trip
- **optimize weight** by leaving pegs, inner cabin etc. at home if it's not needed on the trip
- **compress the packsack** as much as possible

In the Camp

- make sure you **pitch on an even surface**. Some models depends on this for optimal ventilation
- **do not camp in too high grass** if you want floor level ventilation
- **remove sharp rocks and sticks** that could harm the tent floor (i.e. use footprint)
- **stretch the tent as much as possible** for optimal strength and water repellency
- if wet or very windy, you need to **re-adjust the tension of the guy ropes**
- if very windy, **use extra guy ropes and pegs** for stability
- **put the packsack somewhere where you can find it** again (i.e. mesh pockets inside the tent)
- **avoid fire and smoke** near the tent – be aware of wind directions!
- keep an eye on **guy rope tension** once in a while
- the pack sack is a little bigger than necessary in case of an emergency pack down
- **remove all traces from your camp**

Living with your tent

- **keep it clean** by hosing it after use, if very dirty. But don't use high pressure
- **clean it with a soft sponge**
- use **no harsh chemical cleaning** or machine washing
- **keep it dry**, and if packed down wet, remember to dry it as soon as possible – remember that a wet tent is heavier than a dry one
- **check guy ropes and pegs** once in a while, and buy new ones if damaged
- if you have **damaged poles**, your local Nordisk dealer can supply new ones
- be aware that long **exposure of sunlight can degrade the fabric**
- if you want floor in your apsis, you can **purchase a tailored footprint**
- love and nurse your tent. **If you protect your tent, it will protect you**

You can find more information on nordisk.eu

Tips & Tricks

- 1 Adjust the cabin size by moving the ring on the center webbing
- 2 Make sure the ventilations in both ends are free of grass and other stuff for optimal ventilation
- 3 When you build your tarp, make sure you leave in the corner pole in the door side (foot end).
- 4 You can open the door from the top also, for better ventilation.
- 5 Make sure the tension of the tent is optimal, for the best climate in the tent.
- 6 You can erect the outer tent, without the inner tent (as a shelter)
- 7 You can add extra guy rope to the straps on the pole channel for extra strength in harsh winds.
- 8 Notice the Telemark comes with an integrated pack sack, so no pack sack to loose anymore.
- 9 The pack sack is made a little bigger than necessary in case of an emergency pack down.



www.nordisk.eu

Nordisk Company A/S

Papirfabrikken 74
DK 8600 Silkeborg
Denmark
info@nordisk.de
Tel. +45 73 73 40 00

Nordisk Freizeit GmbH

Max-Weber-Straße 16
D-25451 Quickborn
Germany
info@nordisk.de
Tel. +49 (0) 4106 / 76 77-0

Nordisk Asia

Unit 904, Zhong Rong Heng
Rui West Tower, 560 Zang Yang Road
CN-200122 Shanghai
China
Tel. +86 21 5836 3068

Nordisk Japan Co. Ltd.

2F, 2-8-11, Nishi-Azabu,
Minato-ku,
Tokyo 106-0031,
Japan
Tel. +81(0) 3 6885 8206